

# Cutting holes for receptacles

interstyle

If glass is not drilled properly it can and will easily chip or break. Here is a guide on how to successfully cut glass



Use a high quality diamond coring bit



Use plenty of water for lubrication




Mark the area you will be drilling through



Use a wooden pattern to guide the coring bit



Drill on a stable surface

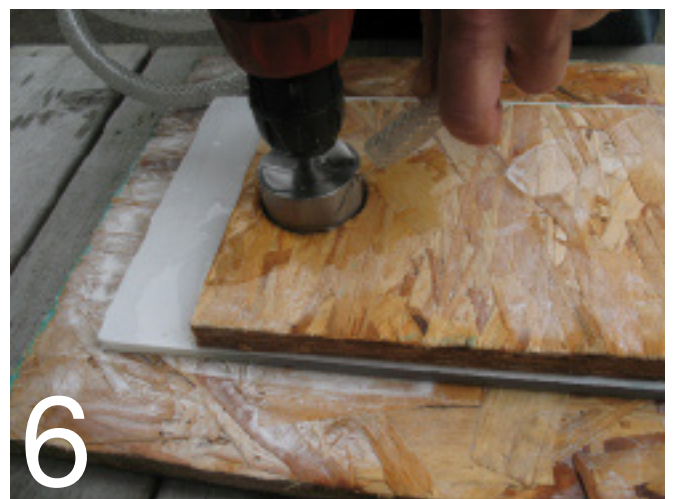


Drill at a slow speed with a water source lubricating the drill and glass



Superimpose a second hole to create an opening large enough to cover the recep-



Remove all glass pieces

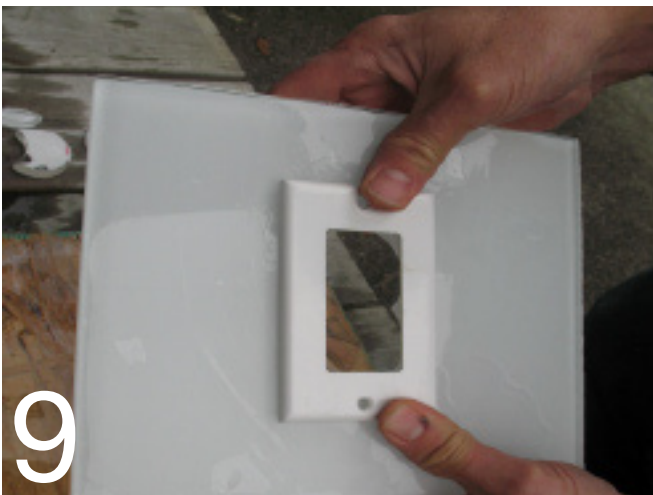

Insure the cutout is large enough



Install tile and receptacle



Replace cover plate

Interstyle Ceramic & Glass Ltd  
3625 Brighton Avenue  
Burnaby, BC, Canada V5A3H5  
1-800-667-1566 or 604-421-7229  
info@interstyleglass.com  
www.interstyleglass.com

© 2017 Interstyle Ceramic & Glass Ltd  
Made and printed in Canada